



1. Place the kite face down and insert the first spar into the pocket on the wingtip and then into the dihedral on the center spine. Repeat for other side. You may have to gently bend the spars to make them fit.

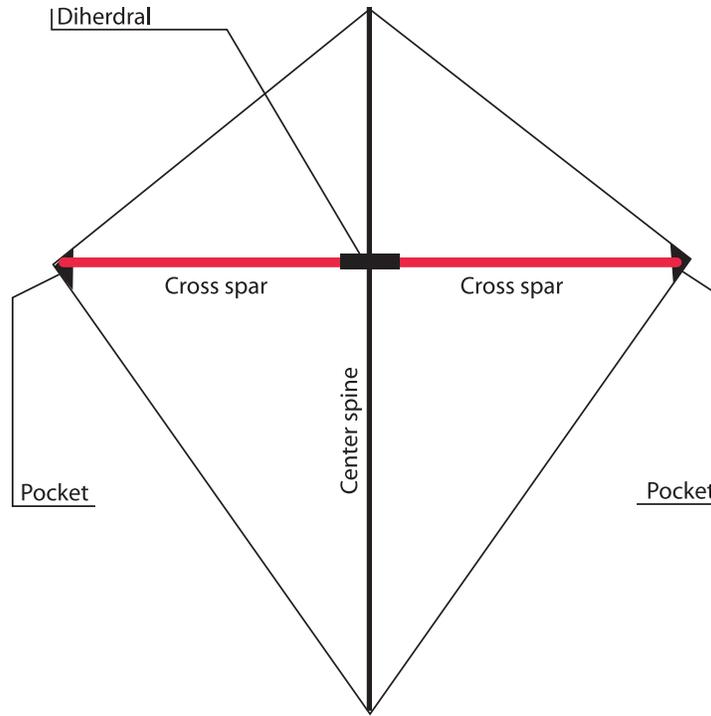

BACK

2. Attach your Flying Line onto the loop (Tow point) located on the bridle and unroll the tails.

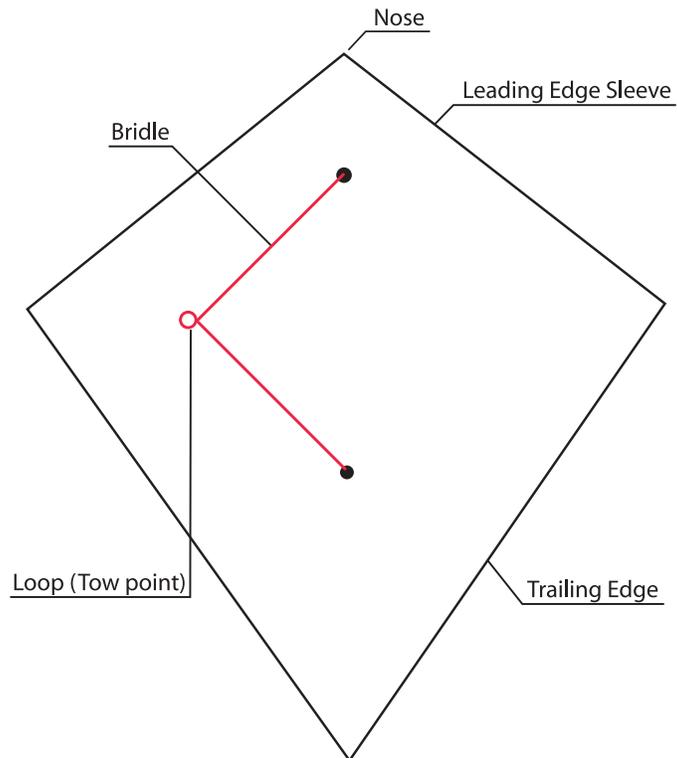

FRONT