


# Psychedelikite

1. Starting with any wing tip spar, locate the pocket just below it. Bend the spar down until it slides into the pocket. Repeat this step for all other wing tip spars.

BACK OF KITE

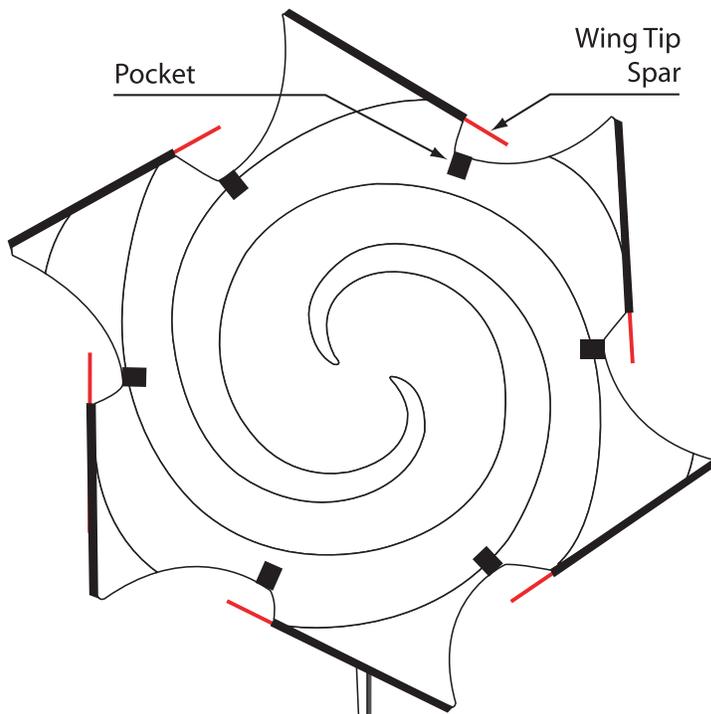

2. Attach your Flying Line to the Keel.

